



Quick set up guide.

Please note that this 'quick set up guide' is designed to help familiarise you with the tents features, general set up and to help you check the tent prior using it for the first time. This guide is not intended as a replacement to the main instructions and we strongly recommend that you study the main instructions supplied before erecting your tent.

Safety First


- Never use combustible fuels inside your tent.
(Gas/Petrol/Mentholated Spirits etc - lights/cookers/heaters)
Remember tents can burn.
Do not smoke.
- Do not use naked flames except in designated cooking areas.
Try to locate this tent at least 6 m from other campers.
Know the site's safety procedures
Keep all exits clear.
Camp Safely.

Before Use

- Please check the contents, erect and pitch your tent fully before embarking on your first camping holiday. In the unlikely event of finding any manufacturing defects or missing items please rectify this with your local dealer before going away.
- Be careful to avoid pitching your tent over sharp stones etc as this may damage the groundsheets. Pitching under trees may cause the flysheet to be contaminated with sap, this is not only impossible to remove but may also damage the flysheet.

Tent Limitations

Tents are designed to be lightweight and packable and therefore require care and understanding in their use. Whilst the outer Flysheet is waterproof, driving rain can, in some cases, cause water ingress around vents, zips and seams. You will get a certain amount of condensation build up. This is caused by the relatively warmer, humid air inside the tent making contact with colder outer fabric of your tent. This should not be confused with leakage. Please take particular care when assembling your tent in windy conditions. Ensure you have others to help you. If you overstress poles, they will break. Your local retailer can supply replacement / spare pole sections. Always pitch your tent securely and ready for all weather conditions using all pegs and guys. The standard pegs supplied with this tent are suitable for normal ground conditions, however rocky, boggy, sandy or loose soil may require specialist pegs which are available through your local retailer. It is advisable to have some of these pegs to hand for use should you encounter such ground conditions on your trip. Never push pegs in by hand use a wooden or rubber faced mallet. Make sure your tent and personal belongings are insured. We accept no liability for consequential damage. Storm damage is not covered under our guarantee. Never pack your tent away wet or store your tent in a wet or damp conditions, it will get mildew. If you have to pack down in the rain ensure the tent is thoroughly dry before repacking.

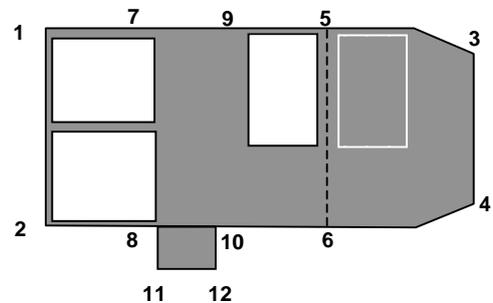

Assembly

Please note these instructions are guidelines only and we recommend reading and studying the main instructions fully before using your tent for the first time.

- 1/ Lay out the flysheet so that one of the vent ends is facing into the prevailing wind & zip in the main groundsheet if this is separately packed.
- 2/ Assemble all the poles supplied. You will notice the pre-curved steel roof poles may have a colour coded sticker, this corresponds to the coloured hem trim on the end of the pole sleeve that the pole is to be threaded through. Thread the poles through the sleeves on the flysheet following the number sequence shown on the photograph. Please note if the poles are all the same size there will be no colour coding.
- 3/ Assemble all the larger steel upright poles. Place the open end of the upper angled section of the steel upright pole over the ferrule on one side of the roof pole N0 1 ensuring the pole sleeve does not get caught when engaging the bottom end of the steel pole onto the ring and pin at the base of the tent. The adjustable webbing should be lengthened to ease fitting. Repeat this for the opposite side of roof pole N0 1. Gently repeat this for roof poles 2,3,4 and 5. Remember to re adjust ring and pin webbings as necessary.
- 4/ Once all poles are in place and located, peg points 1 & 2, then gently pull the tent into shape so the flysheet is as smooth as possible. Opening the doors will allow air to flow freely into the tent easing this process. The help of a second person is advised at this point. Once fully pulled out with the base groundsheet and flysheet smooth, peg points 3 & 4. Then with all zips fully closed peg out the other main pegging points as indicated, following the number sequence on the floor plan. Thread the smaller porch poles into place and peg the porch section.
- 5/ Peg out all remaining pegging points and guy lines and adjust as necessary, do not over tension guy lines this will distort the poles making the tent unstable.
- 6/ Following the same process and caution for the main poles repeat the same process for the smaller porch poles.
- 7/ Place the inner tents supplied, inside and clip into place.

After Care

Always clean off mud and grass before packing. Always dry your tent thoroughly before storing. Store in dry well ventilated conditions. Treating the outer fabric with a proofing spray at regular intervals will prolong the life of your tent.